



FTT ISO 1182 Spare Parts List

<i>Part Number</i>	<i>Part type</i>	<i>Part Name</i>	<i>Unit Price</i>	<i>Notes</i>	<i>Instrument</i>
1005-2	Furnace	Furnace tube	POA	Inner tube of furnace with winding only. Note that this has not been tested in a full furnace assembly.	ISO 1182
1015-2	Furnace	Furnace guard (top plate)	POA		ISO 1182
1016-3	Furnace	Support plate, 2 Off	POA		ISO 1182
FTT0040	Furnace	Furnace Assembly	POA		ISO 1182
1007-4	Sample	Oil lite pivot bushing, 2 Off	POA		ISO 1182
1010-2	Sample	Specimen holder insertion device	POA		ISO 1182
1014-3	Sample	Guide bar ("right" side vertical)	POA		ISO 1182
1018-2	Sample	Stainless steel specimen bucket	POA		ISO 1182
1019-2	Sample	One piece stainless steel specimen holder	POA	Vertical rod and bucket support ring	ISO 1182
1020-3	Sample	Guide tube	POA		ISO 1182
1022-4	Sample	Collars, 2 Off	POA		ISO 1182
1036-4	Sensor	Thermal sensor	POA		ISO 1182
4850	Thermocouple	1.5 mm x 250 mm furnace over temperature alarm thermocouple	POA	T/C and plug (220-0381)	ISO 1182
4850	Thermocouple	1.5 mm x 250 mm furnace thermocouple	POA	T/C and plug (220-0381)	ISO 1182
4851	Thermocouple	1.5 mm x 500 mm specimen surface thermocouple	POA	T/C and plug (220-0381)	ISO 1182
4851	Thermocouple	1.5 mm x 500 mm specimen centre thermocouple	POA	T/C and plug (220-0381)	ISO 1182